

# Remote Control Guide



# Controlling The Remote

**TV, Set-Top-Box**  
Use one remote to control multiple devices.

**Menu**  
Displays the menu.

**Arrow Keys and OK/Sel**  
Navigate and select onscreen choices.

**Guide**  
Opens the Interactive Program Guide.

**Red, Green, Yellow, Blue**  
Access additional features on set-top box.

**Volume Up and Down**  
Raise or lower the volume.

**On Demand**  
Access video on demand services.

**Mute**  
Turn the sound off or on.

**Aspect Ratio \***  
Temporarily change the conversion mode from Original Size to Fit Screen.



**Off**  
Turn on/off a selected device.

**Info**  
Display current channel and Program information.  
Press again for more detail.

**Exit**  
Exit the current screen.

**Page +/-**  
Page up or down in lists and Interactive Program Guide.

**Channel Up and Down**  
Changes to the next higher or lower channel.

**Last**  
Recall the last channel you were watching.

**Fav**  
View your favorite channels.

**Number Keys (0-9)**  
Directly select a channel or enter options.

**Input**  
In TV control mode, will change the input of the device you are controlling.



## WHAT'S ON TV?

There's more than one way to see what's showing on TV.

### Info Button:

Press Info and you will see the name and a description of the current program at the top of the screen.

### OK Button:

Press OK to show the 'Now Playing' bar and you will see what program is currently playing.

### Guide Button:

This is the most comprehensive view of what's on. Go ahead and page through...  
...you're bound to find something to watch.

### Browse Button:

Press Browse (right arrow) to show the channel you are currently tuned to at the top of the screen. At the bottom of the screen, the 'Info Bar' shows you the channel number, channel name, current date and time, program name, date and time the program airs, a progress bar, and the program that airs next.